


MODEL: 53238SL
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

UNPACK THE FOUNTAIN


YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS:
 LID, FOUNTIAN BODY, RESERVOIR, SPLASHGUARD, (4) METAL
 WASHERS, (4) SCREWS, PUMP WITH LIGHT, EXTRA BULB,
 RUBBER HOSE, TRANSFORMER, (2) CORD COVERS, CHANNEL,
 (2) PLASTIC ANCHORS AND (2) WOOD SCREWS.

FOUNTAIN ASSEMBLY


**1. PLACE PUMP FLAT IN RESERVOIR, RUN
 PUMP POWER CORD/LIGHT POWER CORD UP AND
 OVER BACK OF RESERVOIR, THEN ATTACH
 RUBBER HOSE TO THE PUMP.**

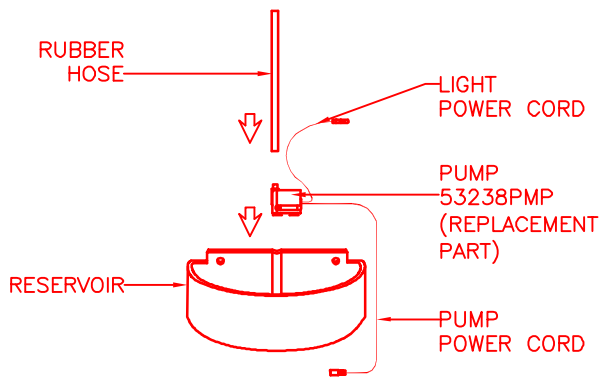


**2. PLACE FOUNTAIN BODY INTO RESERVOIR,
 SECURE THE FOUNTAIN BODY TO RESERVOIR
 WITH (2) METAL WASHERS AND (2) SCREWS
 FROM BACK OF THE RESERVOIR.**

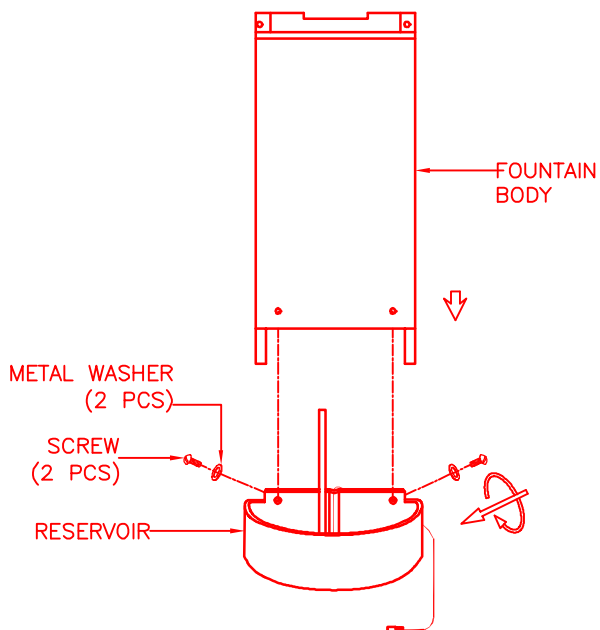

**3. SLIDE BULB INTO BULB CLIP IN LID. THEN
 SECURE THE LID TO FOUNTAIN BODY WITH (2)
 METAL WASHERS AND (2) SCREWS FROM BACK
 OF THE LID.**

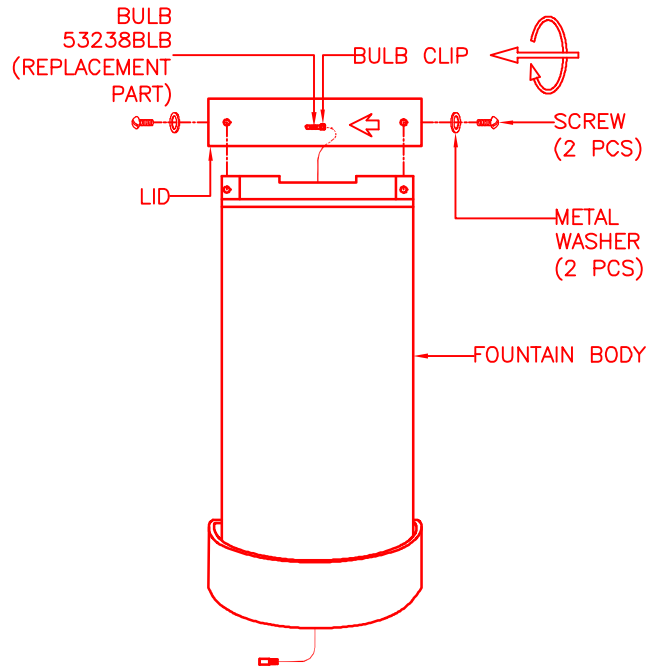

**4. JOIN THE RUBBER HOSES TOGETHER FROM
 BACK OF THE FOUNTAIN BODY.**

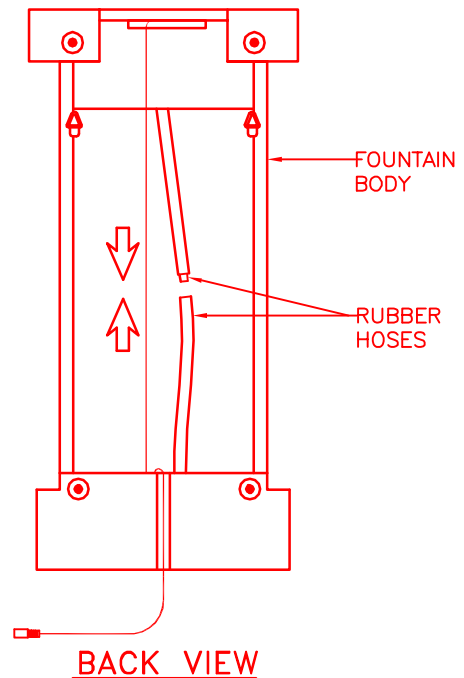

FOR TABLE APPLICATIONS: SKIP TO STEP #8.

FOR WALL MOUNTED APPLICATIONS:

MODEL: 53238SL
ASSEMBLY INSTRUCTIONS
 READ AND SAVE THESE INSTRUCTIONS


FOUNTAIN ASSEMBLY

FOR TABLE APPLICATIONS: SKIP TO STEP #7.


FOR WALL MOUNTED APPLICATIONS:

5. LOCATE DESIRED POSITION ON WALL.


6. INSTALL WALL ANCHORS IN WALL AND HANG FOUNTAIN SECURELY ON BRACKETS. (HARDWARE NOT INCLUDED. CONTACT YOUR LOCAL HARDWARE PROFESSIONAL TO CHOOSE AN ATTACHMENT MECHANISM APPROPRIATE FOR YOUR WALL)

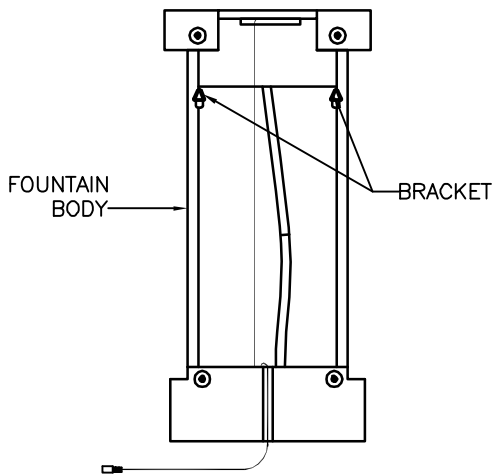

7. TO INSTALL CORD COVER, MOUNT CHANNEL ON THE WALL WITH WOOD SCREWS AND ANCHORS. PLACE CORD INSIDE CHANNEL AND PRESS CORD COVER SECURELY ONTO CHANNEL.

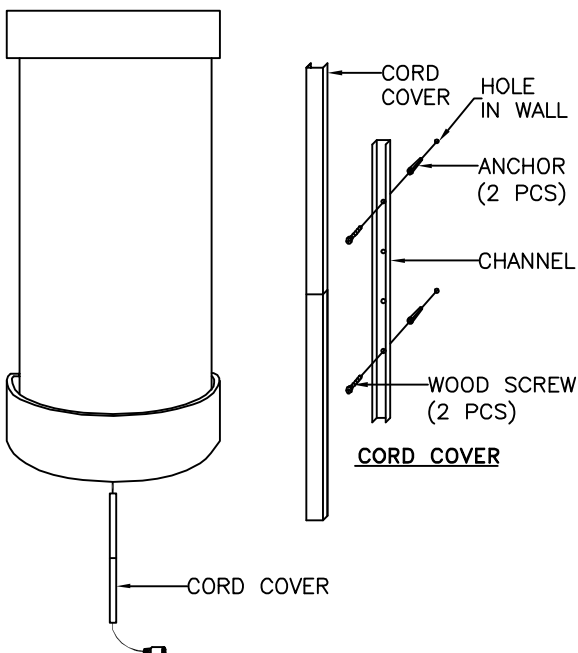


8. JOIN THE CONNECTORS TOGETHER.

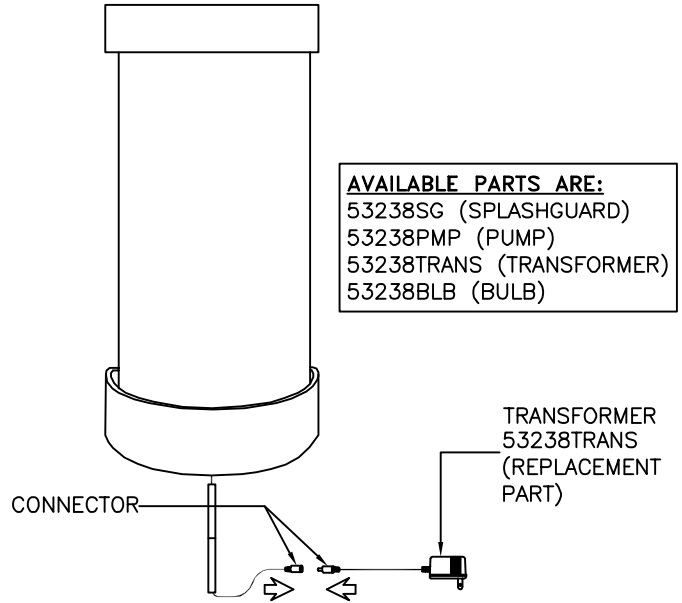

9. FILL RESERVOIR WITH ENOUGH WATER TO COMPLETELY SUBMERSE PUMP. (DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.)

* RESERVOIR HOLDS 0.45 GALLONS OF WATER.

10. PLACE SPLASHGUARD INTO RESERVOIR TO COVER THE RESERVOIR, THEN PLACE DECORATIVE RIVER STONES ONTO TOP OF THE SPLASHGUARD.

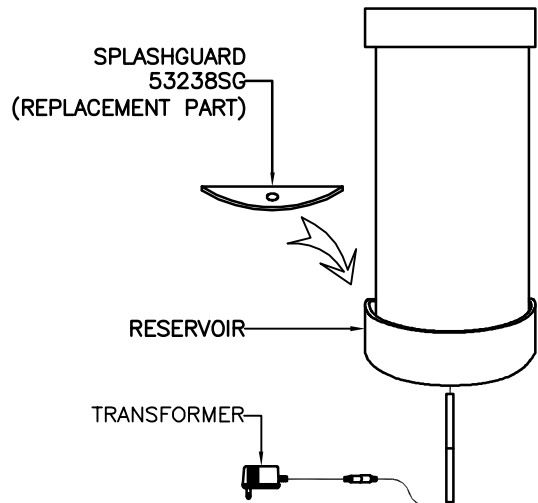

11. PLUG TRANSFORMER INTO SOCKET, YOUR NEW FOUNTAIN IS READY FOR USE.

MODEL: 53238SL

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.
3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

IMPORTANT SAFETY INSTRUCTIONS:

THIS FOUNTAIN IS RATED FOR INDOOR USE ONLY.

WARNING:

* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.