

MODEL: 53240WS

ASSEMBLY INSTRUCTIONS


READ AND SAVE THESE INSTRUCTIONS

UNPACK THE FOUNTAIN


YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: COLUMN, LID, PUMP, (2) LED LIGHTS, PUMP, RESERVOIR, (2) POLES, BASE, (4) METAL WASHERS, (4) SCREWS AND TRANSFORMER. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

FOUNTAIN ASSEMBLY


1. TURN OVER THE RESERVOIR TO SIT ON FLOOR, RESERVOIR BOTTOM FACING UP.

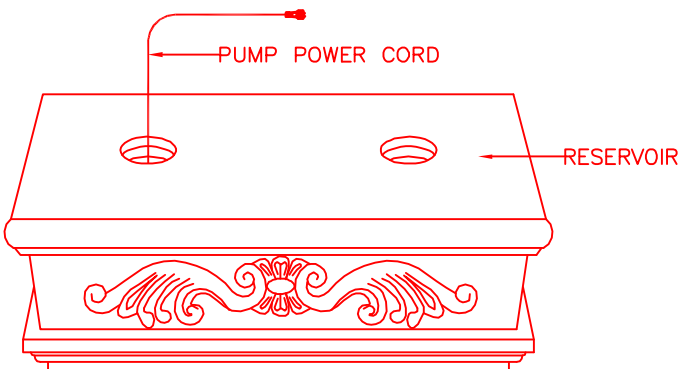


2. FEED PUMP POWER CORD THROUGH POLE THAT HAVE HOLE IN BOTH ENDS, THEN SCREW (2) POLES TO BOTTOM OF THE RESERVOIR.

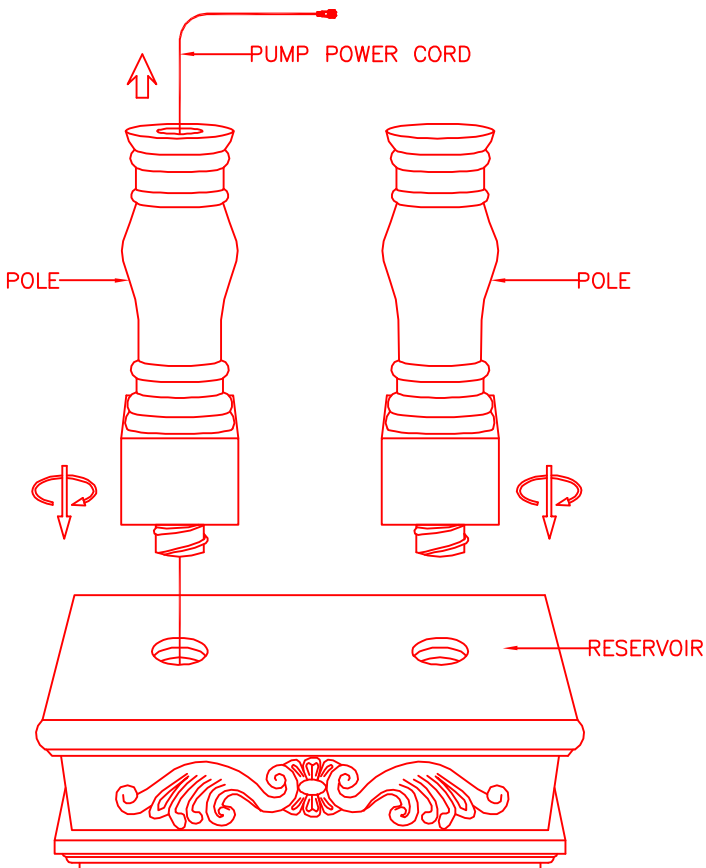

3. SECURE THE BASE TO TOP OF THE POLES WITH (4) METAL WASHERS AND (4) SCREWS.

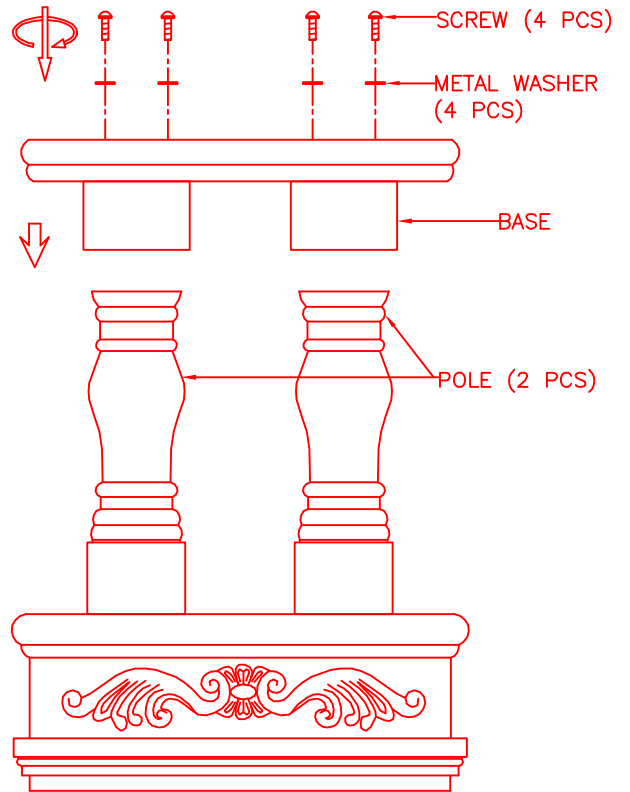


4. TURN OVER THE FOUNTAIN BODY TO SIT ON FLOOR. MAKE SURE PUMP POWER CORD EXITS THROUGH NOTCH IN BOTTOM OF BASE.

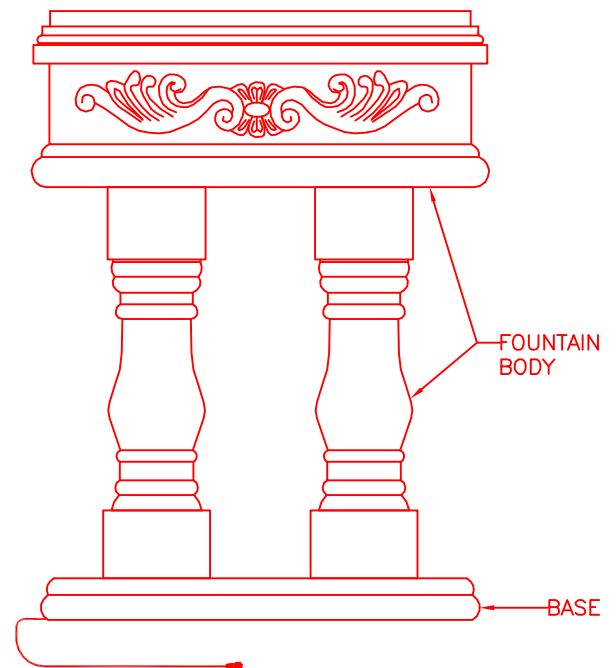


MODEL: 53240WS
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

FOUNTAIN ASSEMBLY


5. INSERT (2) LED LIGHTS INTO LED LIGHT HOLDERS.

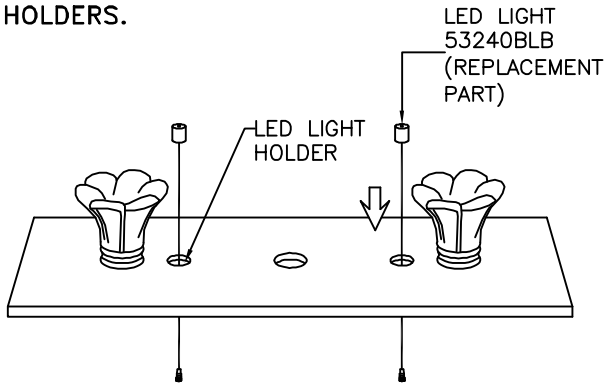


6. JOIN THE LIGHT CONNECTORS TOGETHER AND SCREW CAP TO CONNECTOR TIGHTLY TOGETHER, THEN ATTACH PUMP TO THE RUBBER HOSE.

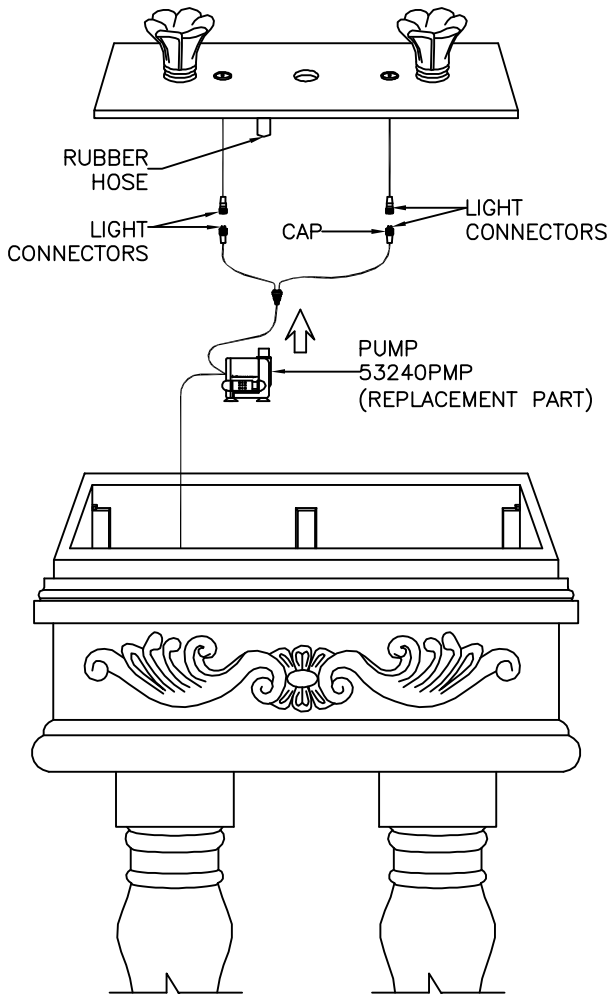

7. PLACE THE LID INTO RESERVOIR, MAKE SURE THE PUMP SITS FLAT IN RESERVOIR.

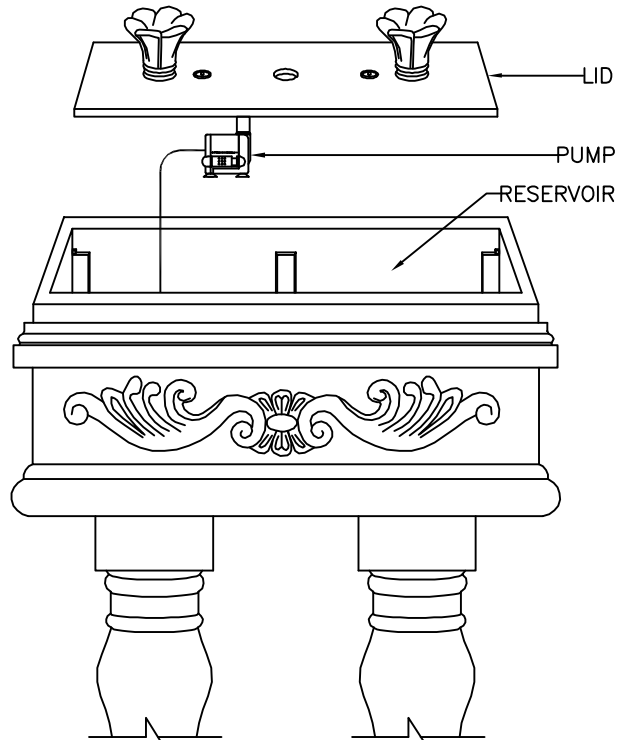

8. INSERT THE TUBE ON BOTTOM OF COLUMN INTO THE HOLE IN LID.

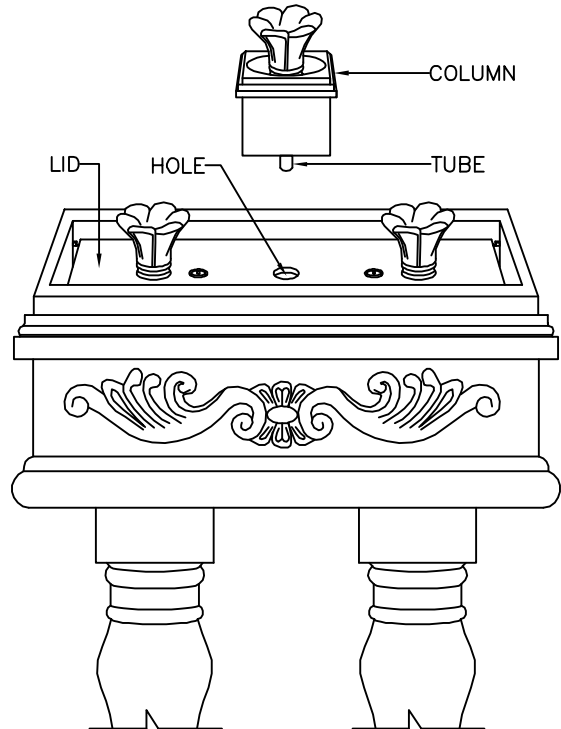


MODEL: 53240WS
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

FOUNTAIN ASSEMBLY

9. FILL BOWL WITH 4 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.

NOTE: DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.

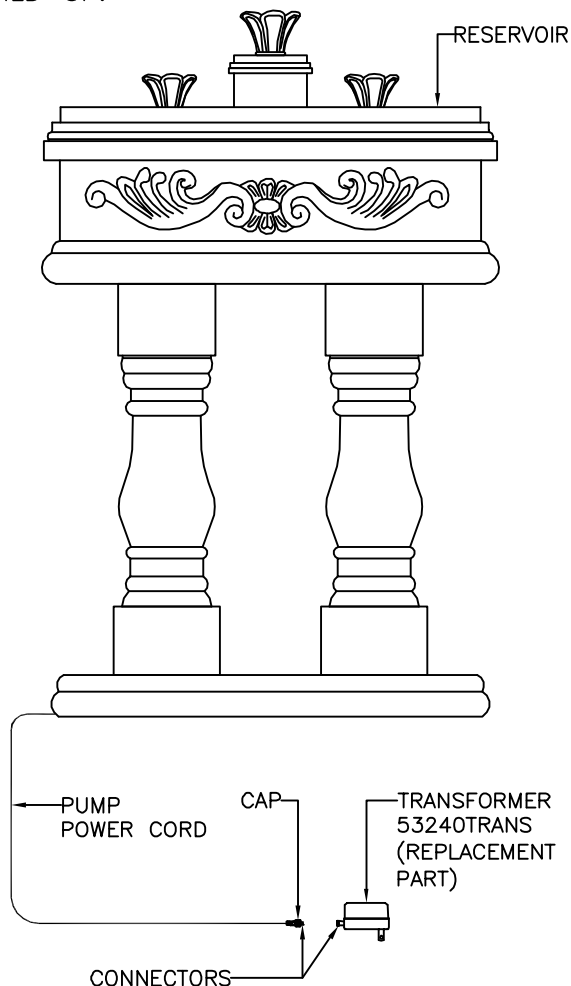

10. JOIN THE CONNECTORS AT TRANSFORMER AND SCREW THE CAP TO CONNECTOR TIGHTLY TOGETHER.

11. PLUG TRANSFORMER INTO OUTLET, YOUR NEW FOUNTAIN IS READY FOR USE.

AVAILABLE PARTS ARE:
 53240PMP (PUMP)
 53240TRANS (TRANSFORMER)
 53240BLB (LED LIGHT)

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.
3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:


TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING:

* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

** THIS FOUNTAIN IS RATED FOR OUTDOOR USE ONLY.

*** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

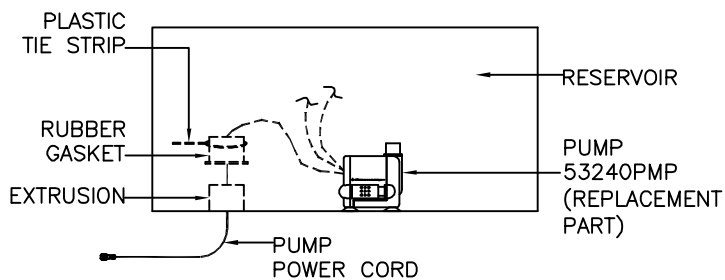

PUMP REPLACEMENT:

1. UNPLUG THE FOUNTAIN.
2. DISASSEMBLE THE FOUNTAIN AS NECESSARY TO EXPOSE RESERVOIR.
3. REMOVE ALL WATER FROM RESERVOIR.
4. SNIP THE PLASTIC TIE STRIP.
5. PEEL BACK RUBBER GASKET FROM EXTRUSION.
6. PULL OLD PUMP FROM FOUNTAIN.
7. THREAD CORD FOR NEW PUMP THROUGH EXTRUSION AS SHOWN.
8. PLACE RUBBER GASKET OVER EXTRUSION AND SECURE BY TIGHTENING A NEW PLASTIC TIE STRIP (INCLUDED).
9. REASSEMBLE THE FOUNTAIN WITH NEW PUMP.